



MECHANICAL PARTS LIST

Note The parts marked by A in the shaded areas are safety-related. Use only the parts as specified by the parts list provided in this manual.

	Symbol	Stock No	Drawing No	Description
		101	467593	COVER TOP
		103	467594	FELT. LEG
		104	467595	COVER - BOTTOM
		105	468069	DOOR CASSETTE
		106	467597	BUTTON - TRACKING
		107	467598	KNOB-TRACKING
		108	468070	FRONT PANEL
		109	467600	SPACER
		110	177176	BRACKET
		111	178478	BRACKET CBA
		113	177179	RIVET
		114	177177	CAP
		115	467601	CUSHION
		117	467594	FELT. LEG
		118	468072	CUSHION
		120	178415	HOLDER WIRE
		121	467604	CASE - BATTERY
		122	467605	BRACKET
		123	468079	BRACKET
		124	178476	HOLDER CBA
		125	178477	HOLDER CBA
		126	468080	HOLDER TRANS
A		127	465505	CORD-POWER
		129	468074	REAR PIECE
		130	468051	REAR TERMINAL PLATE
		131	467607	PLATE-JACK
		132	160725	RIVET
		134	468075	DISPLAY HOLDER
		136	467610	HOLDER-LED
		137	467611	HOLDER
		138	163864	HOLDER FUSE
		141	156816	CAP
		142	468081	BRACKET
		143	468048	1C SOCKET
		144	468073	HOLDER P.W.B.
		145	468082	WASHER POLYSLIDER
		147	177188	SWITCH PRE AMP HEAD
		153	163868	BRACKET
		154	177250	BRACKET
		155	178410	BRACKET
		157	468171	TRANSISTOR- TYPE GP1S06
		202	177192	REEL TABLE SUPPLY
		203	467071	TAKE UP REEL TABLE
		204	156961	HOLDER-IC
		205	160027	COLLAR
		206	156781	WASHER
		207	156798	WASHER POLYSLIDER
		208	157026	ARM BRAKE
		209	161663	ARM TENSION
		210	157028	BRAKE LEFT
		211	162989	BRAKE RIGHT
		212	161680	SPRING
		213	164086	SPRING
		214	467612	BAND ASSEMBLY
		216	468078	ARM
		217	177194	ARM
		218	157034	LOADING LINK ASSEMBLY (RIGHT)
		219	157035	LOADING LINK ASSEMBLY (LEFT)
		220	160019	BASE GUIDE ROLLER (IN)
		221	158197	BASE GUIDE ROLLER
		222	177254	HOLDER LED
		223	177255	HOLDER METAL
		224	160022	ROLLER
		225	178413	GUIDE

Note The parts marked by A in the shaded areas are safety-related. Use only the parts as specified by the parts list provided in this manual.

Symbol	Stock No	Drawing No	Description
226	161665		HOLDER GUIDE BASE
230	147123		SPRING
231	161666		ARM ASSEM IMPEDANCE
232	177195		HEAD FULL ERASE
233	156666		SPRING
234	178442		HEAD AUDIO CONTROL
235	160344		SPRING
236	156770		WASHER
237	163871		SUB BRAKE
238	156771		SPRING
239	see catalog		MOTOR CAPSTAN
240	161264		ARM REC PREVENTION
241	156672		SWITCH (S142)
242	156772		WASHER POLYSLIDER
243	157046		ARM PRESSURE ROLLER
244	179328		ROLLER PRESSURE
245	177158		SPRING
246	157047		SPRING
247	177199		SCREW
249	177201		WASHER
250	468077		ARM
251	177203		GUIDE TAPE
253	164087		BASE CYLINDER
254	177204		SPRING
255	158196		BASE HEAD
258	160307		COLLAR
263	153760		2.6X5.5MMNUT.HEX
264	157769		WASHER
266	177205		SWITCH
301	468076		CLUTCH PLATE ASSEMBLY
302	157053		BELT
303	163876		SLIDER BRAKE
304	160346		SLIDER MODE
305	156676		SPRING
306	177207		GEAR
307	156675		ARM TENSION
311	178411		MOTOR LOADING
312	163879		BELT
313	177208		BELT
314	161670		FLYWHEEL
315	157090		WASHER
316	160347		WASHER
317	163895		BELT
318	163896		BELT
319	164091		PLATE
320	157067		PULLEY
321	156798		WASHER POLYSLIDER
322	157053		BELT
401	467614		FRONT LOADING MECHANISM ASSEMBLY
402	467615		SIDE BRACKET ASSEM (LEFT)
403	161684		BRACKET (R)
404	467616		HOLDER-CASSETTE
405	467617		ROLLER
406	161687		ROLLER (OUT)
407	161688		ROLLER
408	177414		ARM
409	161690		SPRING
410	177212		ARM
411	161692		SPRING
412	177213		BRACKET MOTOR
413	161694		BRACKET
415	161696		WASHER POLYSLIDER
416	161697		E-RING
417	177214		GEAR ASSEM R-LOADING
418	177215		WORM WHEEL
419	161700		HOLDER
420	177216		ARM
421	177217		ARM
422	161703		SPRING

SEE TLS CATALOG
FOR CYLINDERS,
VIDEO HEADS,
CAPSTAN MOTORS

Note The parts marked by A in the shaded areas are safety-related. Use only the parts as specified by the parts list provided in this manual.

Symbol	Stock No	Drawing No	Description
423	177218		GEAR LOADING (L)
424	177415		PLATE
425	177256		HOLDER FRONT
426	177219		SHAFT
427	177220		ARM DOOR
428	176942		SPRING
429	177221		GEAR
432	163969		GUIDE PIECE
501	see_catalog		UPPER CYLINDER
502	see_catalog		LOWER CYLINDER
503	180095		BRUSH
901	156810		3X1 OMM SCREW. TAPPING
902	179446		SCREW
903	152196		3X7MM SCREW. TAPPING
904	152223		SCREW
905	156810		3X1 OMM SCREW. TAPPING
906	157776		3X12MM SCREW. TAPPING
907	160052		SCREW
908	152222		3X13MM SCREW. TAPPING
909	152066		3X8MM SCREW, MACHINE
910	152065		3X6MM SCREW. MACHINE
911	158931		SCREW
912	156741		3X8MM SCREW, TAPPING
913	468083		WASHER
914	152115		3X8MM SCREW, MACH. S/L
950	160053		SCREW
951	152115		3X8MM SCREW. MACH. S/L
952	177232		SCREW
954	152108		3X8MM SCREW, MACH. WASHER
955	152115		3X8MM SCREW. MACH. S/L
956	152115		3X8MM SCREW. MACH. S/L
957	156746		3X5.2MM SCREW. SET
958	152115		3X8MM SCREW. MACH. S/L
959	156746		3X5.2MM SCREW, SET
960	152118		3X8MM SCREW. MACHINE
962	156786		3X12MM SCREW. MACH. WASHER
963	152065		3X6MM SCREW, MACHINE
964	156787		2X3MM SCREW, MACHINE
965	153692		SCREW
966	157095		SCREW
967	156789		3X1.4MM SCREW. MACHINE
968	153760		2.6X5.5MM NUT, HEX.
970	156783		3X8MM SCREW. MACH. WASHER
971	152115		3X8MM SCREW. MACH. S/L
972	152342		2.5XMMM SCREW, TAPPING
973	152116		2.5X3MM SCREW. MACHINE
975	156810		3X10MM SCREW, TAPPING
976	152115		3X8MM SCREW. MACH. S/L
977	152065		3X6MM SCREW. MACHINE
979	157780		3X8MM SCREW. MACH. WASHER
980	152322		SCREW
981	152118		3X8MM SCREW, MACHINE
982	152115		3X8MM SCREW. MACH. S/L
983	156784		3X8M11 SCREW. TAPPING
984	152223		SCREW
985	152223		SCREW
986	160054		SCREW
987	152118		3X8MM SCREW. MACHINE
988	152066		3X8MM SCREW. MACHINE
990	161674		3X2.5MM SCREW, MACHINE
999	159537		3X5MM SCREW

SEE TLS CATALOG
FOR CYLINDERS,
VIDEO HEADS,
CAPSTAN MOTORS