


5.2 MECHANISM ASSEMBLY M 4

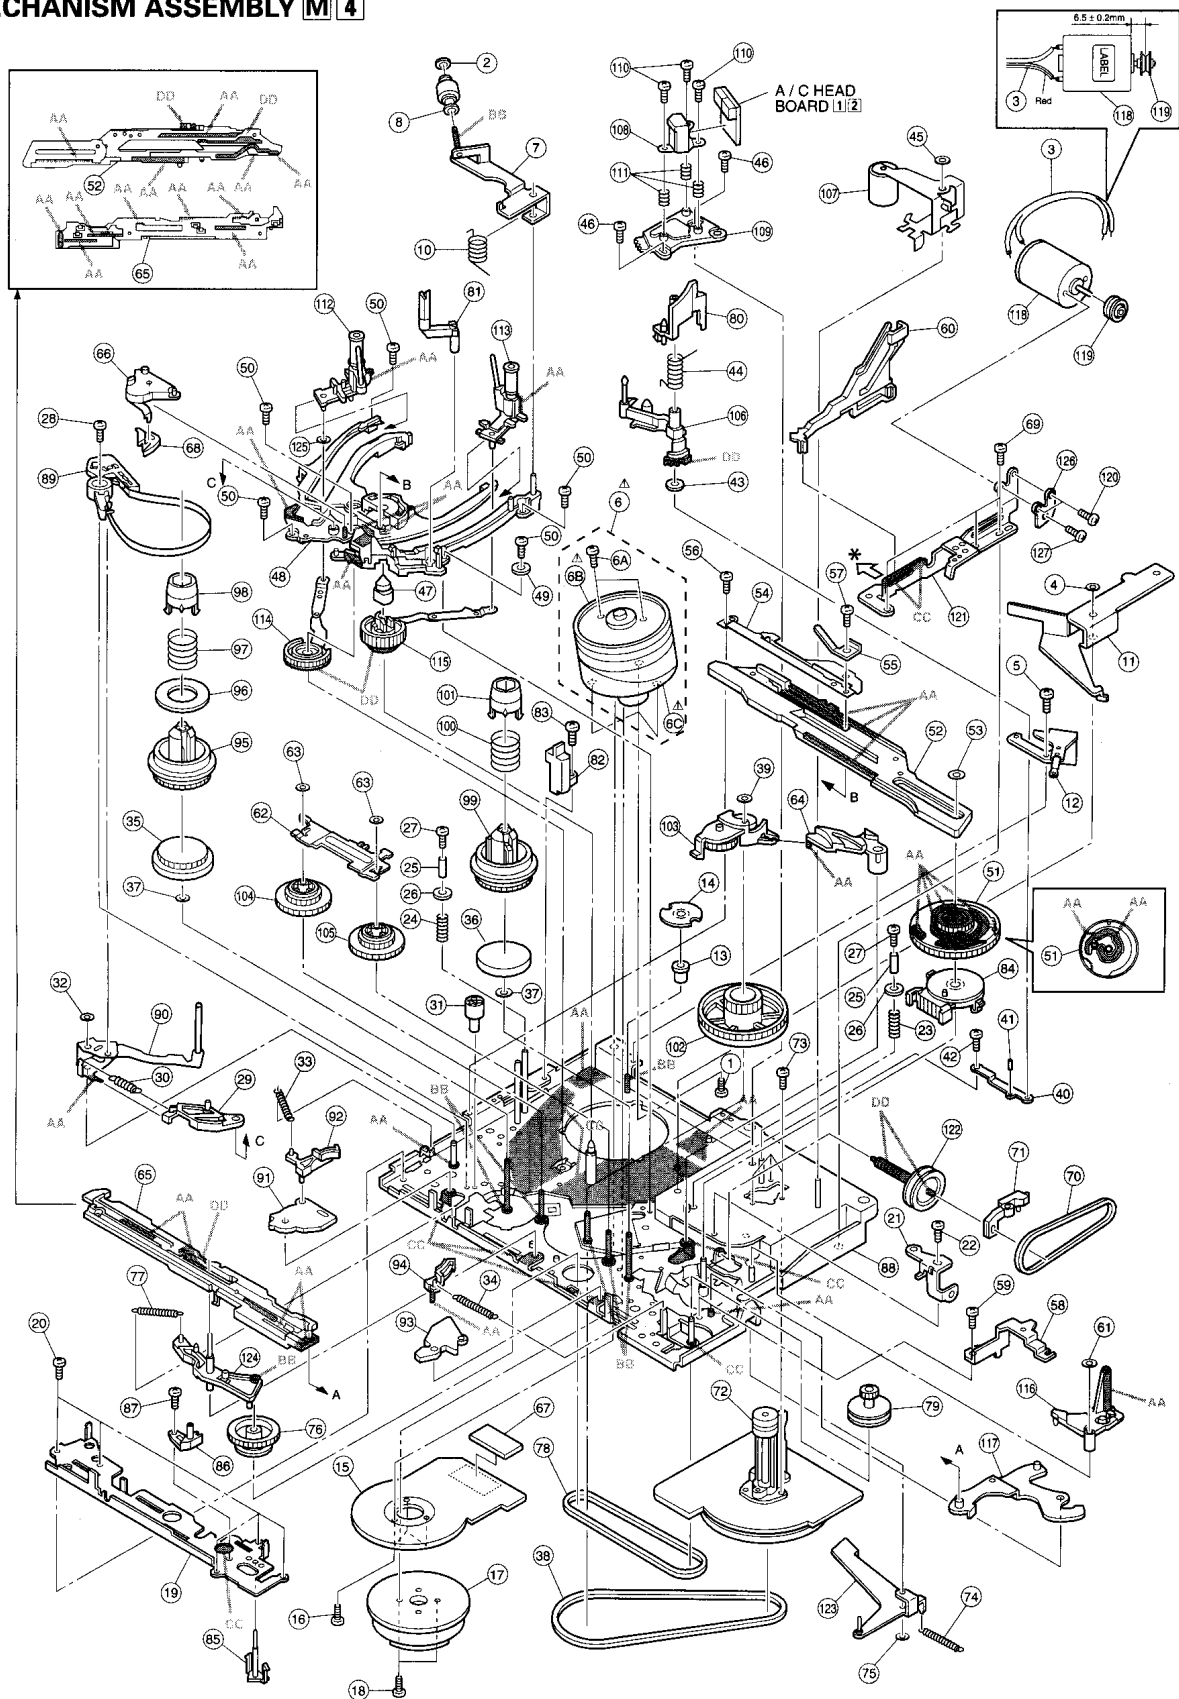

NOTE : The section marked in AA, BB, CC and DD indicate lubrication and greasing areas.

*** When installing the No. 121 guide bracket, draw up to the direction by the arrow.**

| Category | JVC part No. | MARK |
|----------|---------------|------|
| Grease | KYODO-SH-P | AA |
| | KANTO-GB-TS-1 | DD |
| | MD-2000 | CC |
| Oil | COSMO-HV56 | BB |

| Symbol No. | Part No. | Part Name | Description |
|------------|-----------------|-----------------------|---|
| 1 | QYSPSP2606Z | SCREW | M2.6x6 |
| 2 | PQM30017-25 | SLIT WASHER | |
| 3 | PW30101-80AJ632 | WIRE | |
| 4 | PQM30017-31 | SLIT WASHER | |
| 5 | QYSDST2606Z | SCREW | M2.6x6 |
| A 6 | PDM4165A | DRUM ASSEMBLY | SEE TLS CATALOG FOR CYLINDERS, VIDEO HEADS, CAPSTAN MOTORS |
| 6A | | SCREW | |
| A 6B | | UPPER DRUM ASSEMBLY - | |
| A 6C | | LOWER DRUM ASSEMBLY | |
| 7 | PRD45053A | H.C.ARM ASSEMBLY | |
| 8 | PQ46417A-2 | ROLLER ASSEMBLY | |
| 10 | PRD45079 | TORSION SPRING | |
| 11 | PRD31301 | RELEASE ARM | |
| 12 | PRD45047A | BRUSH ASSEMBLY | |
| 13 | PDM4311A-1 | ROLLER ASSEMBLY | |
| 14 | PQ44230 | INERTIA PLATE | |
| 15 | PGZ02610 | STATOR ASSEMBLY | |
| 16 | QYSPSPU17COZ | SCREW | M1.7x12 |
| 17 | PDZ0097-3 | ROTOR ASSEMBLY | |
| 18 | QYSPSP2608N | SCREW | M2.6x8 |
| 19 | PRD20625 | MAIN PLATE | |
| 20 | QYSPST2606Z | SCREW | M2.6x6 |
| 21 | PRD45055 | W.GEAR BRACKET | |
| 22 | QYSDSP2606Z | SCREW | M2.6x6 |
| 23 | PRD30023-62 | COMP.SPRING 62 | |
| 24 | PRD30023-63 | COMP.SPRING 63 | |
| 25 | PRD45080 | TAPE GUIDE | |
| 26 | PRD45081 | GUIDE FLANGE | |
| 27 | PRD43165 | SCREW | M2x6 |
| 28 | QYSDSP2606Z | SCREW | M2.6x6 |
| 29 | PQ35012-1-5 | T.ARM LEVER | |
| 30 | PQM30001-385109 | TEN.SPRING 109 | |
| 31 | PQ46302-1-3 | ADJUST PIN | |
| 32 | PQM30017-47 | SLIT WASHER | |
| 33 | PQM30001-393 | TEN.SPRING 393 | |
| 34 | PQM30001-389102 | TEN.SPRING 102 | |
| 35 | PQ35436 | SLIT DISK(S) | |
| 36 | PQ35437 | SLIT DISK(T) | |
| 37 | PQM30018-69 | SPACER | |
| 38 | PQM30003-38 | BELT(CAPSTAN) | |
| 39 | QYWFM214025 | WASHER | |
| 40 | PRD45056 | HEIGHT PLATE | |
| 41 | QYYASPF2005F | SCREW | M2x5 |
| 42 | QYSPST2606Z | SCREW | M2.6x6 |
| 43 | PRD45082 | TUG SPACER | |
| 44 | PQ46326-2 | TOR.SPRING2 | |
| 45 | PQM30017-24 | SLIT WASHER | |
| 46 | QYSDSP2606Z | SCREW | M2.6x6 |
| 47 | PQ46767-1-2 | GUIDE CAP | |
| 48 | PQ11657-1-9 | GUIDE RAIL | |
| 49 | LP40005-001A | SPACER | |
| 50 | QYSPST2608Z | SCREW | M2.6x8 |
| 51 | PQ21684-1-3 | CONTROL CAM | |
| 52 | PQ11658-1-15 | CONTROL PLATE | |
| 53 | PQM30017-8 | SLIT WASHER | |
| 54 | PQ35138-2 | CONTROL BRACKET | |
| 55 | PQ46423 | EARTH PLATE | |
| 56 | QYSPST2606Z | SCREW | M2.6x6 |
| 57 | QYSPSF2608M | SCREW | M2.6x8 |
| 58 | PQ35217-1-2 | CTL BRACKET 2 | |
| 59 | QYSPST2606Z | SCREW | M2.6x6 |
| 60 | PQ21685-2-10 | PINCH R.PLATE | |
| 61 | PQM30017-8 | SLIT WASHER | |
| 62 | PQ35083-2 | REEL BRACKET | |
| 63 | PQM30017-51 | SLIT WASHER | |

| Symbol No. | Part No. | Part Name | Description |
|------------|----------------|-----------------------|---|
| 64 | PQ35026-1-7 | IDLER LEVER | |
| 65 | PQ 11659-2 | SLIDE PLATE | |
| 66 | PQ21686-1-3 | T-UP LEVER | |
| 67 | PRD30030-169 | PAD | |
| 68 | PQ46345-1-2 | T-UP HEAD | |
| 69 | QYSPST2606Z | SCREW | M2.6x6 |
| 70 | PQM30003-39 | BELT(LOADING) | SEE TLS CATALOG FOR CYLINDERS, VIDEO HEADS, CAPSTAN MOTORS |
| 71 | PQ21699-1-2 | WORM BEARING | |
| 72 | | CAPSTAN MOTOR | |
| 73 | QYSPSG2608Z | SCREW | |
| 74 | PRD30024-98 | TEN.SPRING 98 | |
| 75 | PQM30017-25 | SLIT WASHER | |
| 76 | PQ46354 | CHANGE GEAR | |
| 77 | PQM30001-386 | TEN. SPRING 386 | |
| 78 | PQM30003-40 | BELT(HOUSING) | |
| 79 | LP40008-001B | CASSETTE GEAR | |
| 80 | PQ35030-1-5 | LID GUIDE | |
| 81 | LP20032-001A | L.E.D. PRISM | |
| 82 | PEHE0237 | FULL ERASE HEAD | |
| 83 | QYSDST2610Z | SCREW | M2.6x10 |
| 84 | PU61432-1-1 | ROTARY ENCODER | |
| 85 | PQ46473-1-1 | S-SW PIN | |
| 86 | PQ46474-1-2 | S-SW HOLDER | |
| 87 | QYSPST2606Z | SCREW | M2.6x6 |
| 88 | PRD20622A | MAIN DECK ASSEMBLY | |
| 89 | PQ46298A-5 | TENSION BAND ASSEMBLY | |
| 90 | PQ46303B-8 | TENSION ARM ASSEMBLY | |
| 91 | PQ46305B-03 | M.BRAKE(S) ASSEMBLY | |
| 92 | PRD45108A | S.BRAKE(S) ASSEMBLY | |
| 93 | PQ46308A-05 | M.BRAKE(T) ASSEMBLY | |
| 94 | PQ46309A-4 | S.BRAKE(T) ASSEMBLY | |
| 95 | PR D31304-02 | REEL DISK(S) | |
| 96 | PQM30018-74 | SPACER | |
| 97 | PQ46552 | SPRING | |
| 98 | PQ46553 | REEL CAP | |
| 99 | PRD31304 | REELDISK(T) | |
| 100 | PQ46552 | SPRING | |
| 101 | PQ46553 | REEL CAP | |
| 102 | PQ46497B-2 | PULLEY ASSEMBLY | |
| 103 | PQ46312B-11 | IDLER ARM ASSEMBLY | |
| 104 | PRD45134A | CLUTCH UNIT(S) | |
| 105 | PQ46323A-1 | CLUTCH UNIT(T) | |
| 106 | PRD45178A | GUIDE ARM ASSEMBLY | |
| 107 | PQ46327A-4 | P.R.ARM ASSEMBLY | |
| 108 | PEHE0182 | AUDIO CTL HEAD | |
| 109 | PQ35206-1-3 | HEAD BASE | |
| 110 | PQ43687A | SCREW | M2.6x8 |
| 111 | PQM30002-192 | COMPSRING 192 | |
| 112 | PQ46330C-10 | P.BASEASSEMBLY(S) | |
| 113 | PQ46331D | P.BASEASSEMBLY(T) | |
| 114 | PQ46332B-3 | L.ARM ASSEMBLY(S) | |
| 115 | PQ46337C | L.ARM ASSEMBLY(T) | |
| 116 | PQ46342B-10 | LEVER ASSEMBLY | |
| 117 | PQ46344B | CHAN.LEVER ASSEMBLY | |
| 118 | PU60628-3-2 | LOADING MOTOR | |
| 119 | PQ43546-1-2 | MOTOR PULLEY | |
| 120 | QYSPSP3005Z | SCREW | M3x5 |
| 121 | PRD20626-01-05 | GUIDE BRACKET | |
| 122 | PQ46395B | WORM GEAR | |
| 123 | PRD45049A | C.B.ARM ASSEMBLY | |
| 124 | PQ46353A-2 | CHANGE ARM | |
| 125 | PRD45179 | SPACER | |
| 126 | PRD45167-1-2 | MOTOR GUIDE | |
| 127 | QYSDSP2604Z | SCREW | M2.6x4 |